


## TZ Gumball Machine Dazzler Kit Installation Instructions

Lift the play field out of the game and rest it on the supports as shown. Pull the shooter back before lifting and slide it out until it clicks in the track.

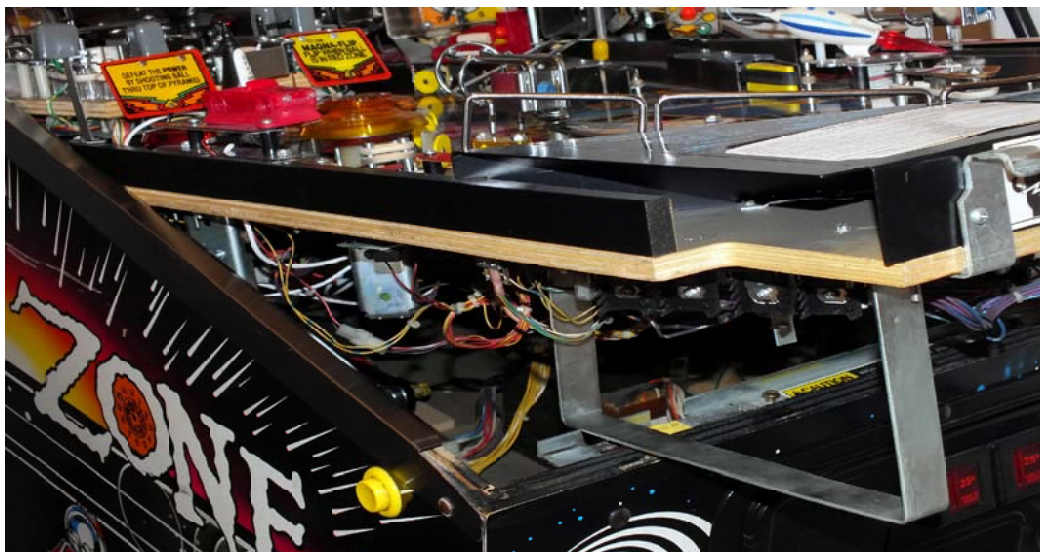

Remove the cap on the gumball machine and remove the clear plastic diverter. It is used to guide the stacking of the balls. The kit includes a new diverter with a slot cut in the top to seat the dazzler board.



Insert the two connector plugs through the ball opening from inside the gumball machine as shown below.



Install the diverter with the cable on the left side. The dazzler board will fit into the cutout of the diverter with the cable exiting in a notch by the slot. The dazzler board will fit down in the machine flat on the diverter and the side dividers.






Pull the wire taught and out by the metal circle of the gull guide and tie it there with the black ty-wrap. Cut off the excess wrap. The cable must be held tight against the top of the ball hole in the machine so the ball does not get stuck when trying to enter.




Install the cover back on the gumball machine. Route the cable over the back board and up into the backbox..



Open the backbox and lay the speaker board down on the cabinet. Use a towel to protect the board from scratches. Locate J116 and J122 on the power driver board.

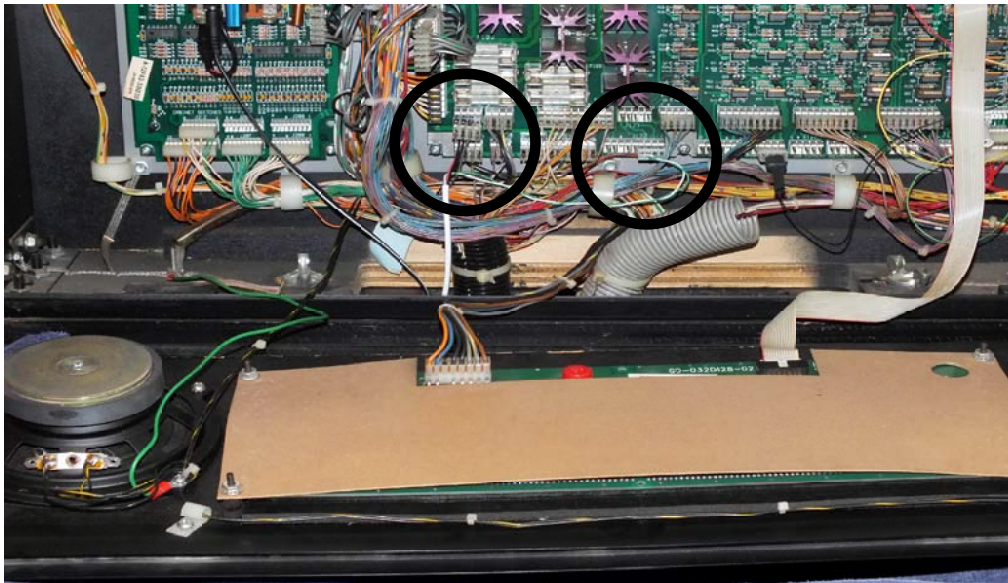

Unplug the plug on J116 and plug the dazzler plug with pins sticking out the back onto J116. Then re-connect the plug that was there on the plug that was there on the dazzler plug J116. There are only 3 pins. Line the bodies up. Plug 122 onto J122 right end. The white wire will be to the left as shown below.

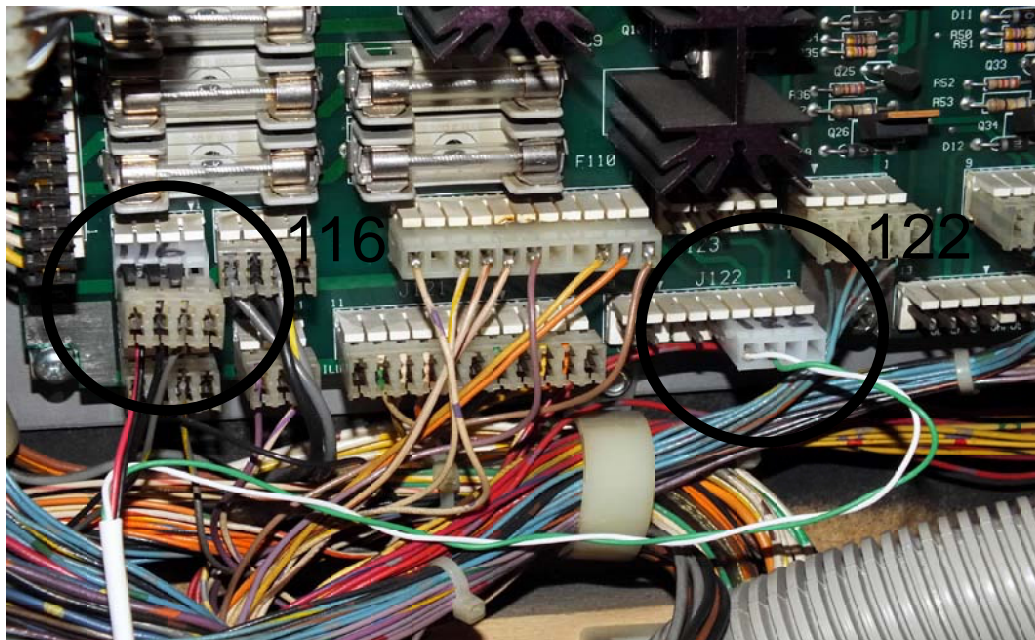

This completes the installation. Close up the backbox. Pull the shooter out and set the play field back into the cabinet. Replace the cover glass. The dazzler kit has 5 illumination modes and 9 dynamic modes that change as you shoot the loops.