


Kit comes complete with 2 lights, 1 power supply, wiring harness and velcro Step 1 - Remove the glass and tilt up the playfield (it is recommended you remove the balls).

Step 2 - remove the factory woofer and route the harness out the hole as shown.

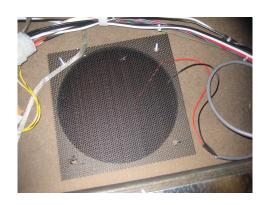



Step 3 - Plug in the harness as shown below, and reinstall the woofer. Connector is located right inside the coin door on the right side.





Step 4 - The attach the power supply box, and lights under the machine using provided velcro as shown. Horizontal in the front and vertical in the rear.

Step 5 - Close up the machine and turn it on.....Enjoy!

Note: For easy uninstallation for use of a pinball cart, the power supply is located on the bottom of the machine for easy removal, simply unplug and un-velcro for storage or transport.

