
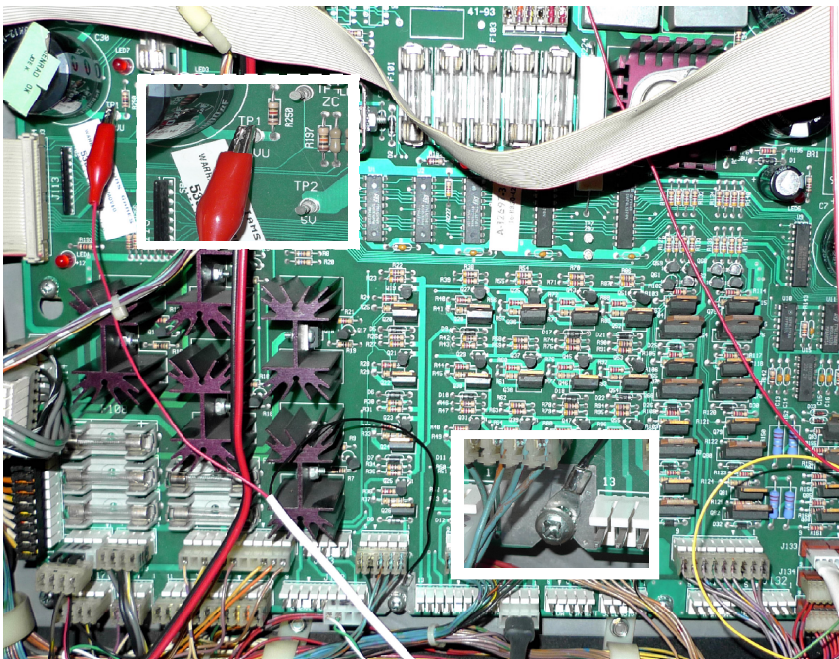
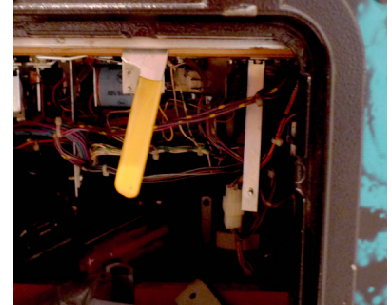


## Twilight Zone TV installation

Be sure the game is switched off during installation. Open the coin door and retrieve the backbox keys. Open the backbox by unlocking it at the top and lifting the class out. Set it in a safe place. Lift out the speaker panel and lay it on a towel on the game cover glass. Swing open the lamp board for access to the power driver Board.

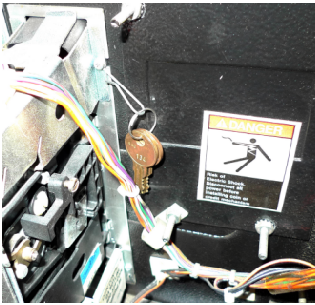

Mount the fork lug that is on the black wire under a mounting screw as shown. Clip the red alligator on TP1 for 12 volts as shown. Lower the TV down into the base cabinet carefully and push all the extra cable down with it. Close up the backbox reversing the steps.

Rotate the yellow handle in the coin door to the left releasing the cover glass lock bar. Lift it off and close the coin door. Slide the cover glass off and set it safely to the side. Pull the ball shooter out about an inch with your right hand and an lift up on the playfield arch with your left hand to clear the plunger. Now use both hands to lift the playfield up and pull it onto the support rails.



Reach behind the playfield and retrieve the TV and place it on the playfield. Put the playfield back into the cabinet remembering to pull the ball shooter back so as not to damage the rubber tip. Note there is a wood piece near the front edge of the area under the backbox. You can see 3 screws in the picture above. A good place to mount the TV is on that wood piece in line with the center screw. Use the center adhesive dot to stick it to the wood. You can keep the other two dots in reserve or use them but only one will hold the TV adequately. The TV will not be in the way when lifting the playfield as it comes past it in the process. Feed the extra cable into the base cabinet behind the TV. Turn on the game and the TV should start working. Replace the cover glass, lock bar and lock the coin door.