



THE TWILIGHT ZONE

Ford Thunderbird installation instructions.


1. Remove playfield glass from machine.
2. Slide playfield out, lift it to vertical position.
3. Located the hole beneath "town square" and disconnect the GI light connector (picture 1)
4. Lower playfield.
5. Remove the two nuts holding the plastic located on the outer edge of "town square" (picture 2)
6. Completely remove this plastic along with the attached GI connector. (picture 3)

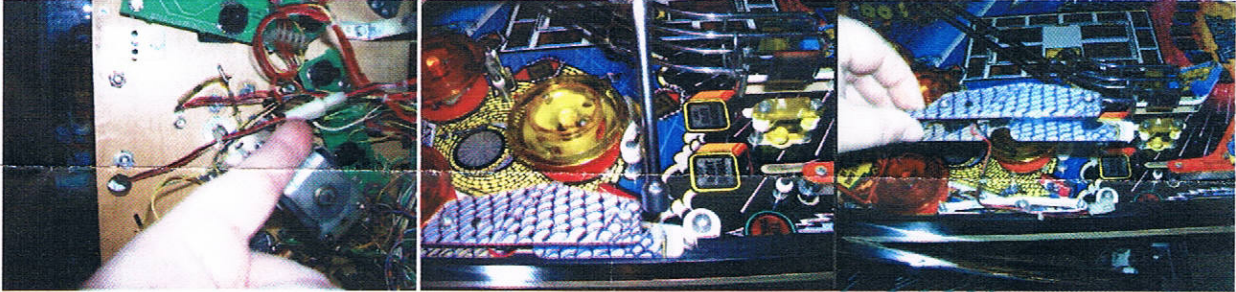

7. Unscrew the nut and bolt on the bottom of this plastic (picture 4)
8. Line up the hole on the cars bracket and reinstall nut and bolt (picture 5)
9. Run the wires along the outside post and wire tie them to the GI wires (picture 6)

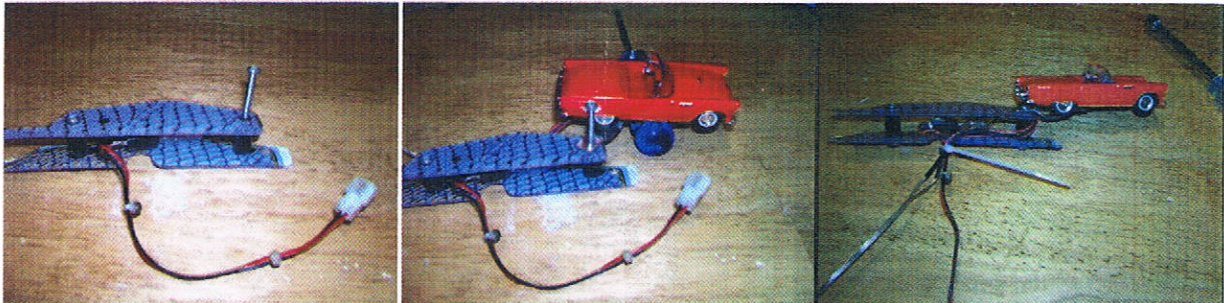

10. Slide each wire in the hole in the playfield under the plastic removed (picture 7)
11. Replace the plastic and re-install the two nuts (picture 8)
12. Position car to your liking (picture 9)

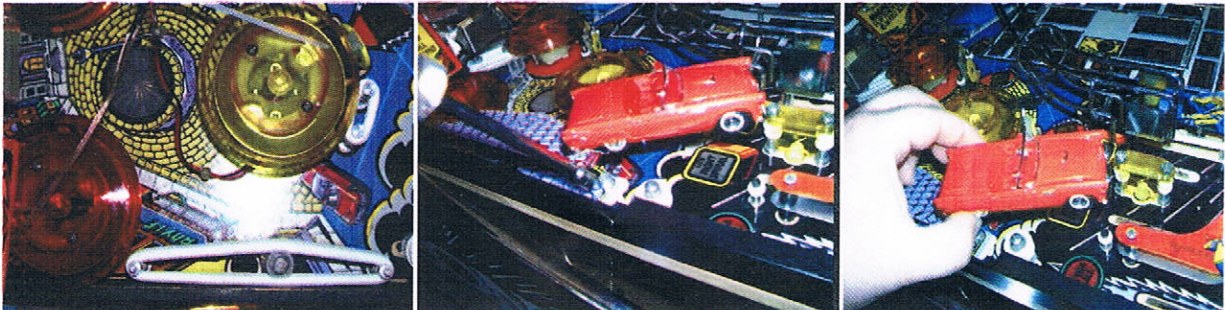

13. Lift playfield to vertical position and reconnect GI connector (picture 1)
14. Remove your twist in 555 bulb holder under the "DEAD END" insert, remove the bulb place your bulb in new bulb holder and twist it into in the Dead End 555 insert.